

 


CLEANING PROCEDURE FOR NGAGE POWERPARTS HYPER FLOW AIR FILTERS

Once after every 15,000 Kms N-Gage Air Filters need cleaning and recharging process to restore your air filter to alike new condition. Cleaning your N-Gage Air Filter is simple when following the below 4 easy steps.

STEP 1 – SOAK DIRTY AIR FILTER WITH DILUTED SOAP OIL FOR 20 MINS

First prepare diluted washing liquid by squeezing N-Gage Soap oil (5-10 ml / 2 Liters) and stir with normal cold water to prepare Air filter cleaning liquid, Then Soak the Dirty Air Filter into soap water for 20 mins to make the dirt particles loosen up . Then continue scrubbing gently with old tooth brush inside and outside (Both Sides) , continue to rinse the filter until all traces are gone. It may be necessary to repeat the above steps.

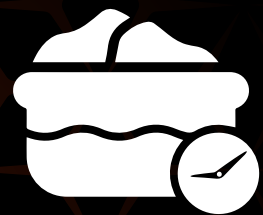

STEP 2 - RINSE YOUR AIR FILTER WITH COOL LOW PRESSURE WATER

 
 
Rinse off your air filter with cool low-pressure water applied to the clean side out in order to flush the dirt out of the filter, Continue to rinse the filter until all traces are gone.

STEP 3 - DRY YOUR N-GAGE HYPERFLOW AIR FILTER

After rinsing your filter, gently shake off the excess water and only allow filter to dry naturally. Do Not apply N-Gage Recharge Oil Until the air filter is completely dry.

NOTE:

1. Do not Dry the filter with compressed air to remove excess water.
2. Do not use Hair dryers to make the process fast as they damage the fibre properties and construction.

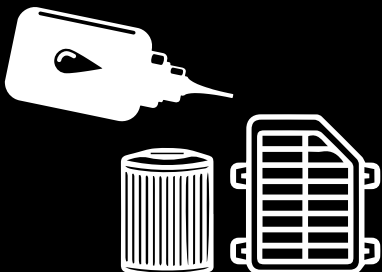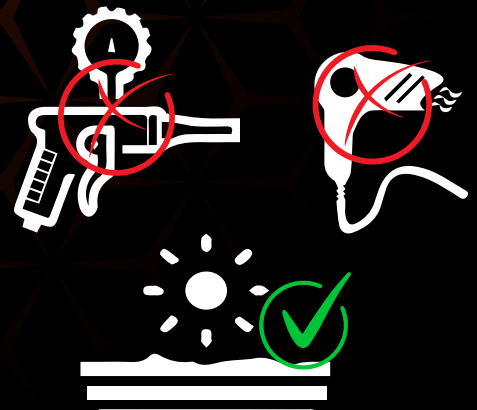

STEP 4 – APPLY N-GAGE AIR FILTER OIL

Apply N-Gage Recharge Oil evenly along the crown of each pleat. Allow the oil to penetrate for approximately 20 minutes then touch up any light areas on either side of filter until there is uniform red colour at all areas.